

1/6

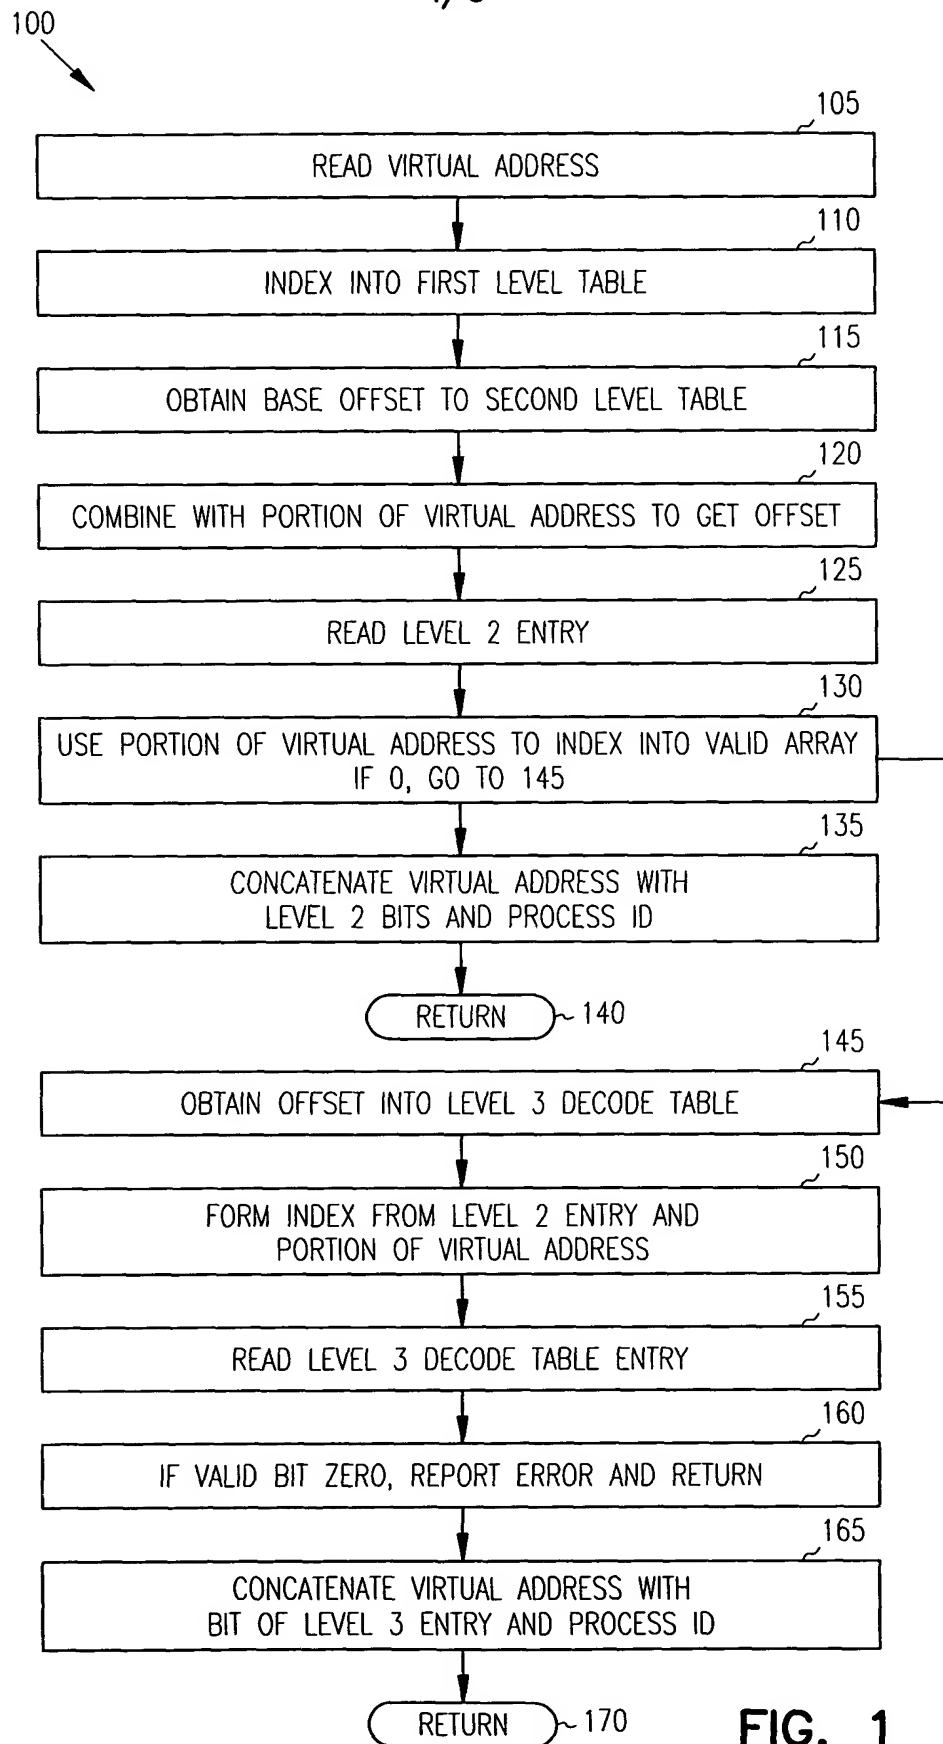


FIG. 1

2/6

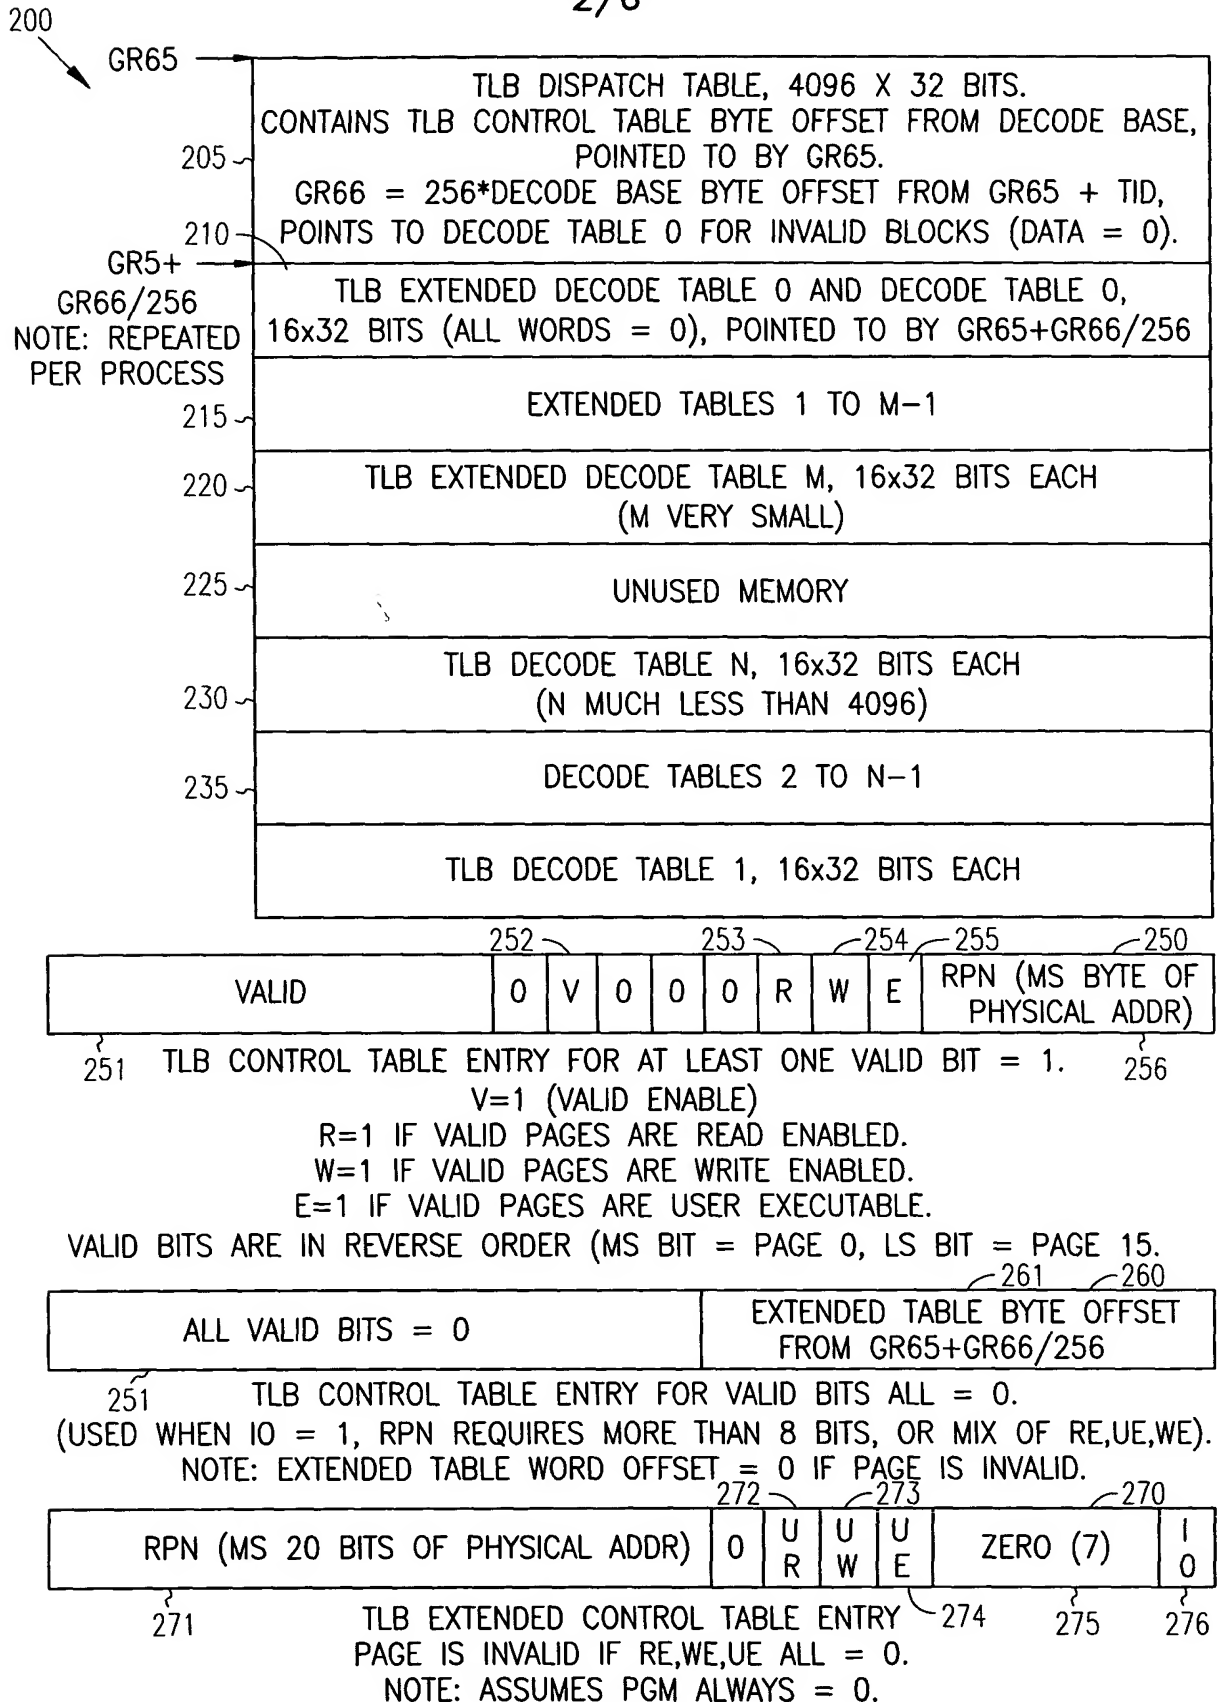


FIG. 2



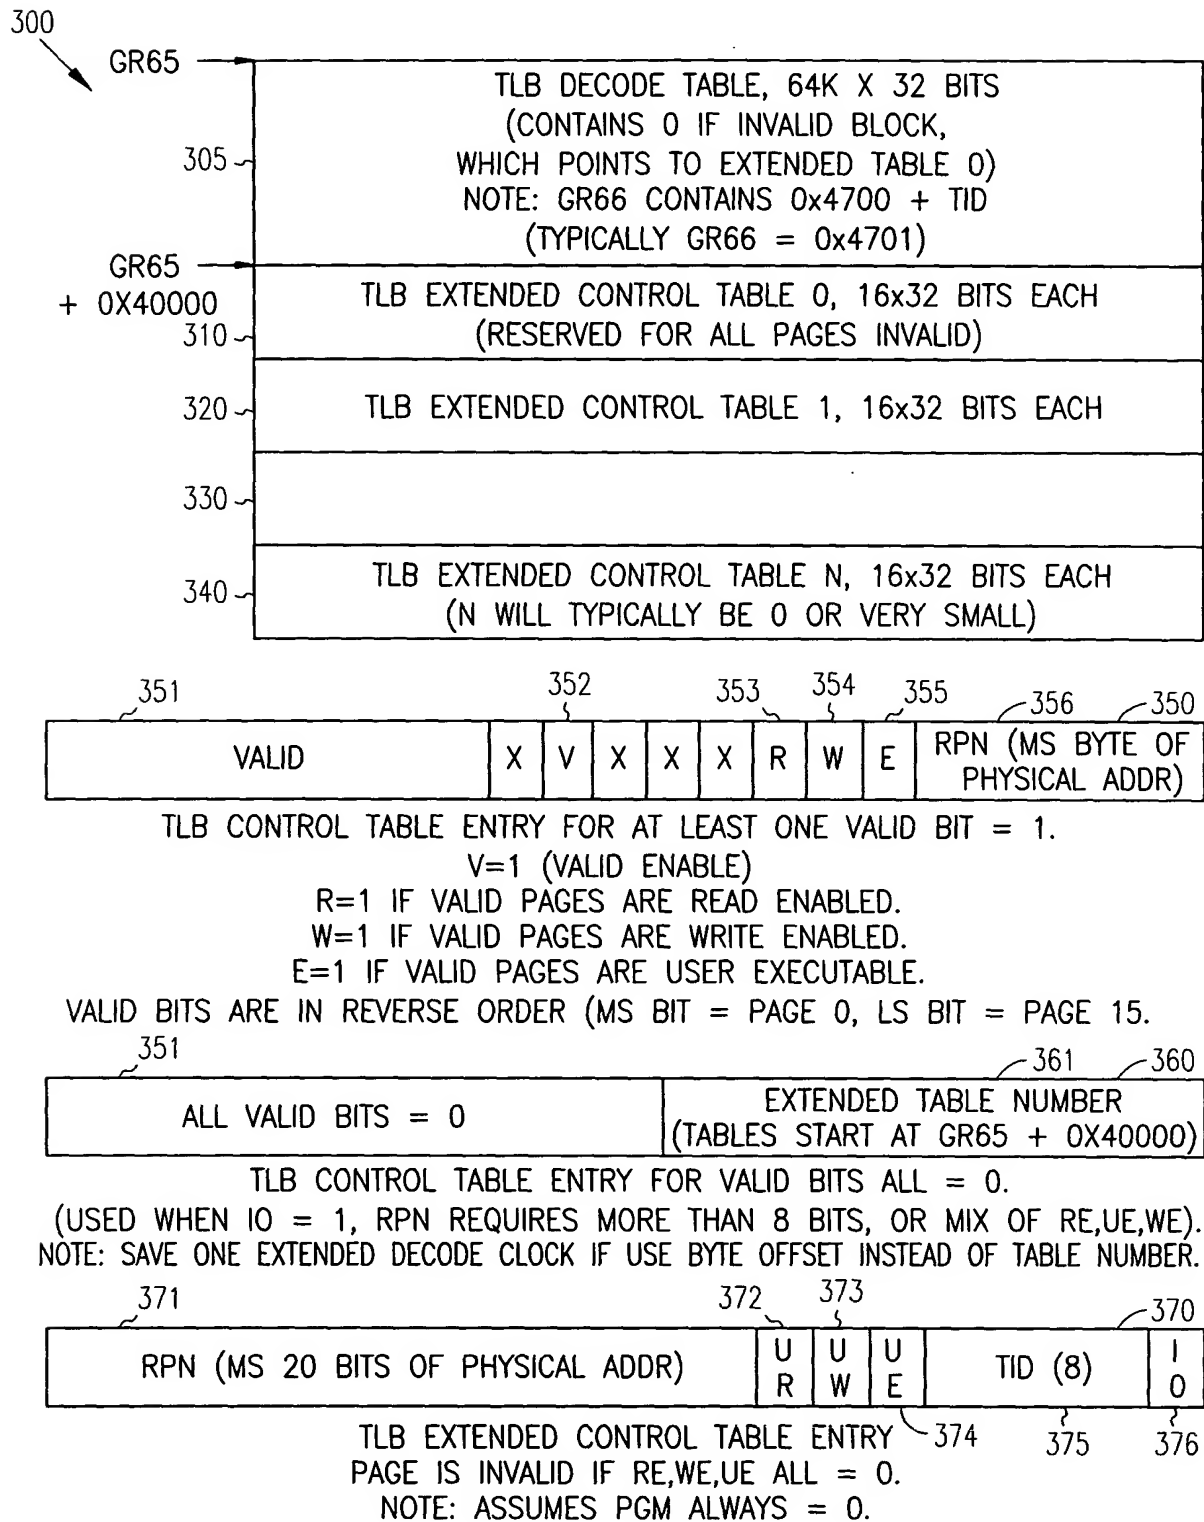


FIG. 3

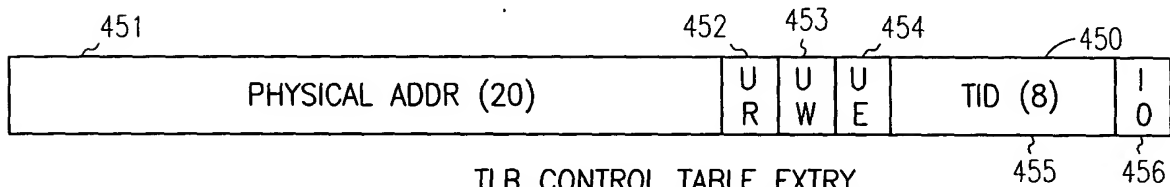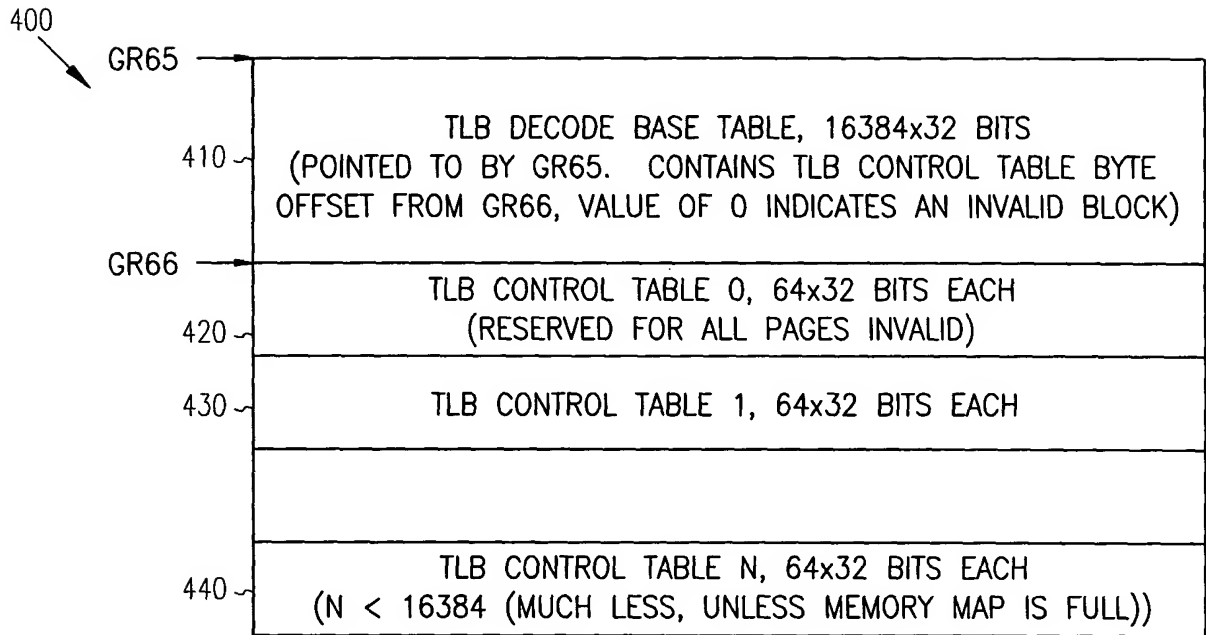

TLB CONTROL TABLE ENTRY

UR = 1 IF PAGE IS READ ENABLED.

UW=1 IF PAGE IS WRITE ENABLED.

UE=1 IF PAGE IS USER EXECUTABLE.

IO = 1 IF PAGE IS IN I/O SPACE.

PAGE IS INVALID IF RE,WE,UE ALL = 0.

NOTE: ASSUMES PGM = 0.

FIG. 4

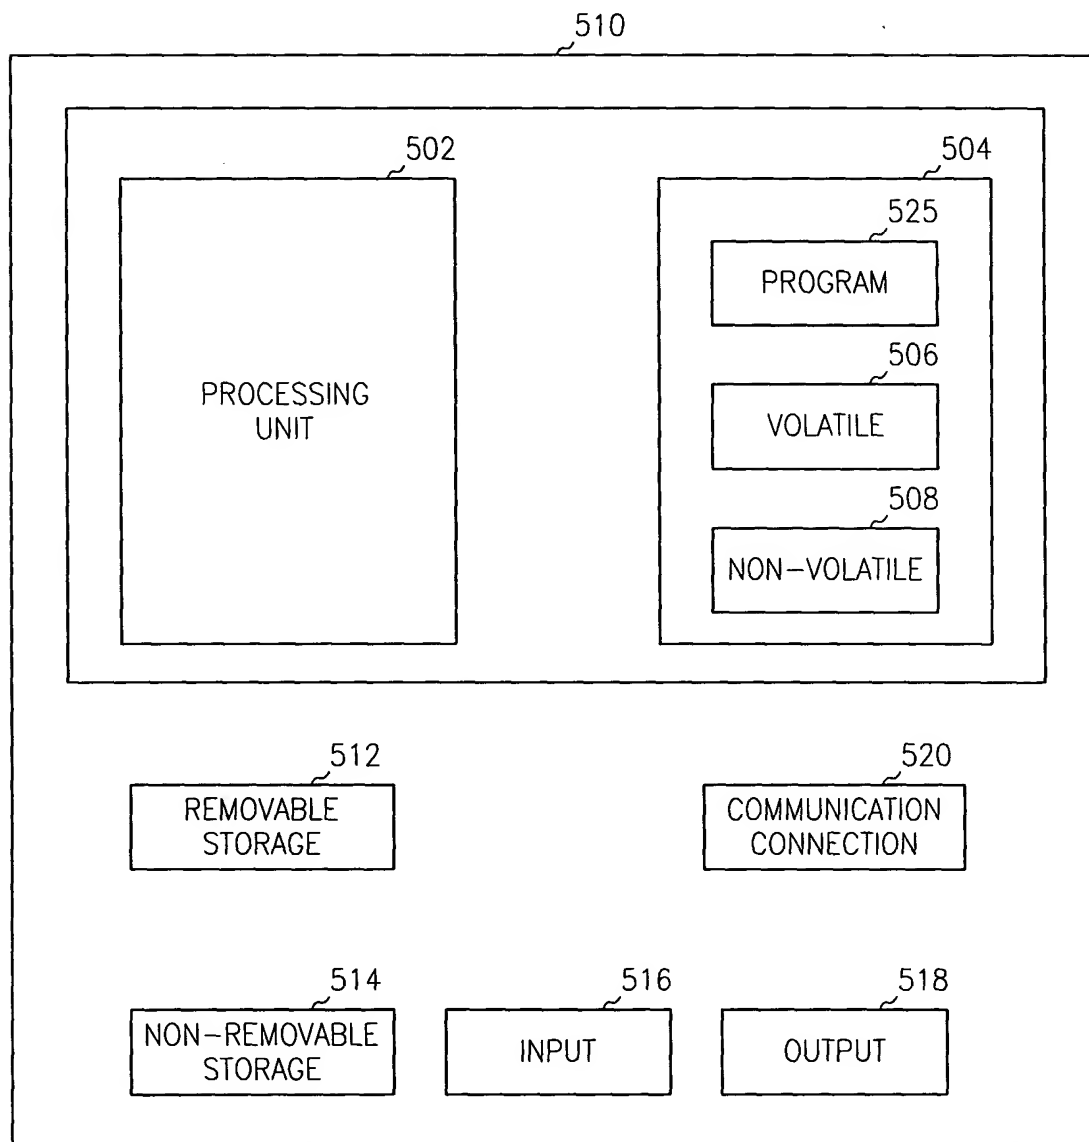


FIG. 5

